


BMS LINK FOR PYLONTECH BATTERY 48V

Step1: Connect BMS LINK

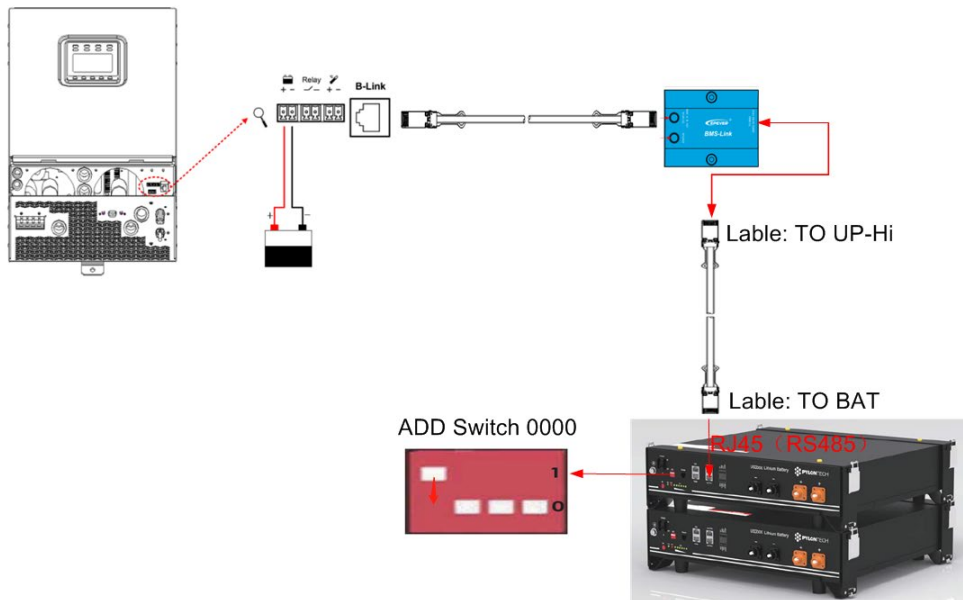

Step2:Set parameters of UP-HI

1.Press UP+DOWN on the main interface at the same time



2. Enter the following interface



3. Press DOWN to PROTOCOL



4. Long press the SET/ENTER until the number flashes



5. Press the UP, SELECT 11

6. Press SET/ENTER.

Step3:Set parameter of Battery



Step4:

The LCD BMS icon of UP-HI lights up,
the green STATUS indicator of BMS-LINK lights up,
BMS communication is successfully established.

