



SolisCloud


Operation Guide V1.0

01 Register a account



Open Web: https://www.soliscloud.com/


Step 1: Click "Sign up now", to jump to the "register" interface.

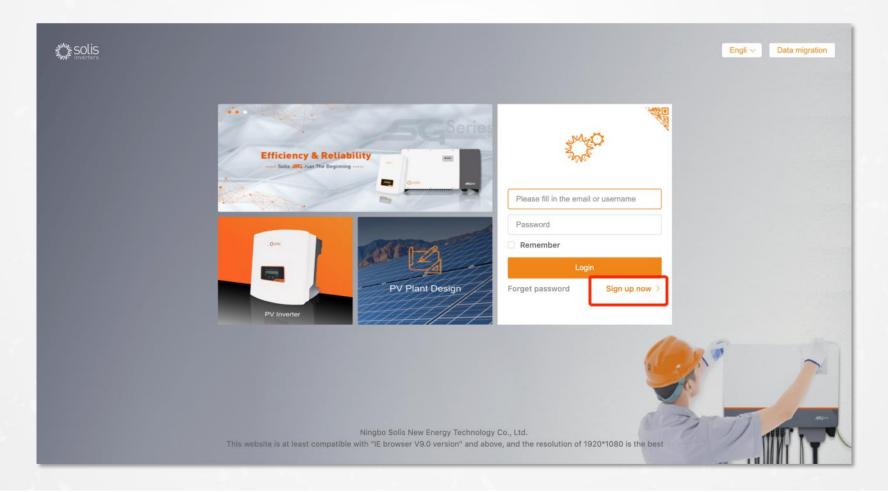

01 Register a account




Step 2: If you are a installer, you need register as organization; If you are a owner, you need register as owner

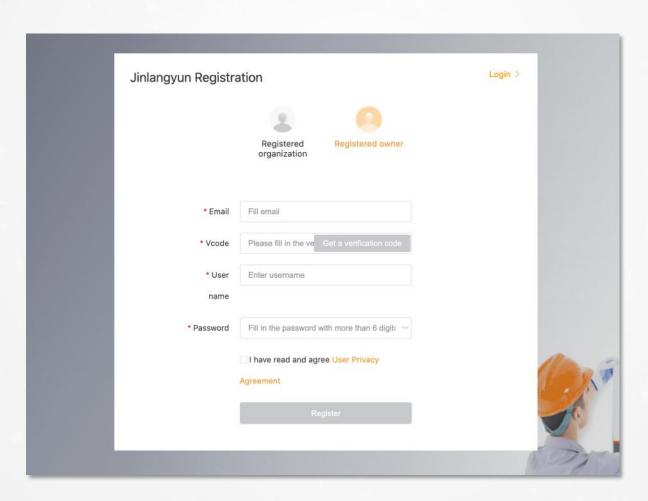

02 Add a new plant




Step 1: Click "Plant Overview > Add plant", to jump to the "Add Plant" interface.

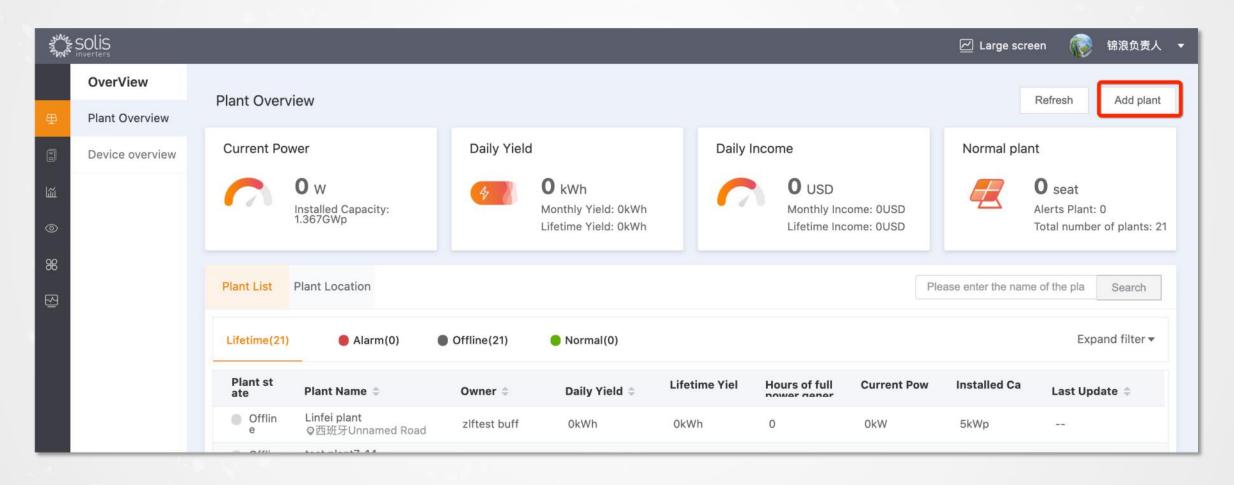

02 Add a new plant



Step 2: Add Owner and Visitor

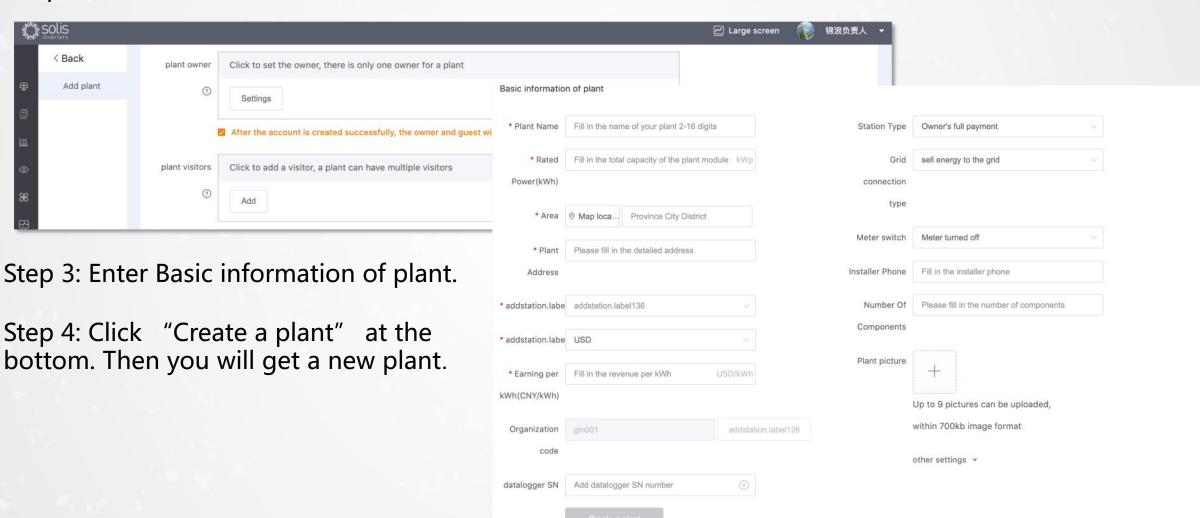

03 Bind the datalogger




When you add a new plant, you can bind datalogger to the new plant.

Basic information	n of plant				
* Plant Name	Fill in the name of your plant 2-16 digit	ds	Station Type	Owner's full payment	
* Rated	Fill in the total capacity of the plant mo	odule kWp	Grid	sell energy to the grid	
Power(kWh)			connection		
* Area	Map loca Province City District		type		
			Meter switch	Meter turned off	
* Plant	Please fill in the detailed address				
Address			Installer Phone	Fill in the installer phone	
* addstation.labe	addstation.label136		Number Of	Please fill in the number of components	
			Components		
* addstation.labe	USD	~			
* Earning per	Fill in the revenue per kWh	USD/kWh	Plant picture	+	
kWh(CNY/kWh)				Up to 9 pictures can be uploaded,	
Organization	gin001	addstation.label126		within 700kb image format	
code	giriou i	addstation.laber120		<u> </u>	
code				other settings *	
datalogger SN	Add datalogger SN number	⊕			
	Create a plant				

03 Bind the datalogger




Besides, you can conduct the following steps as below: Open single plant, click "Add datalogger"

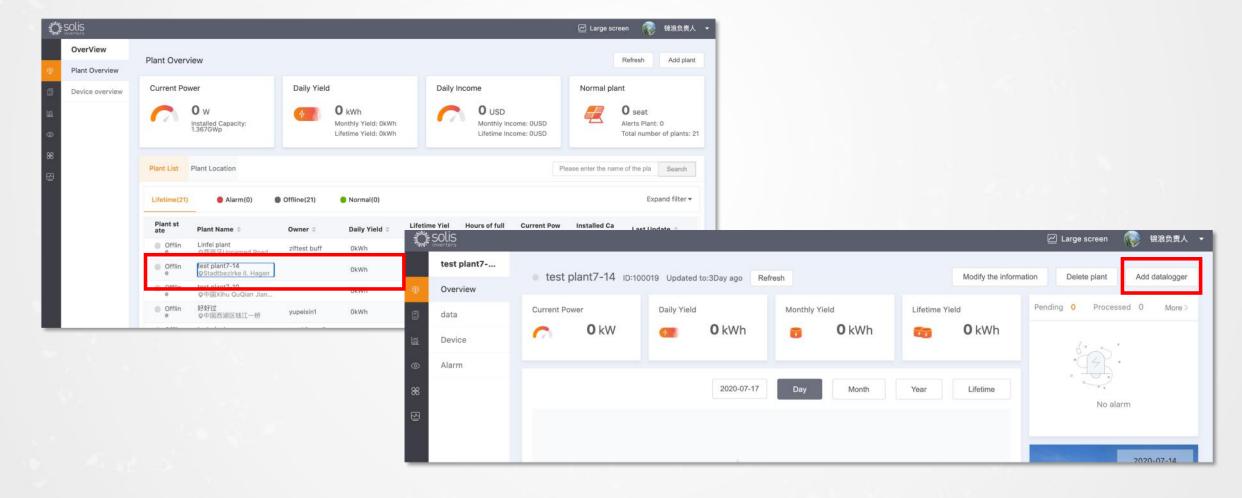

04 View plant information




Click "Plant Overview", to jump to the plant list interface, on which information such as power installed, real-time power, daily yield, and alarm is displayed.

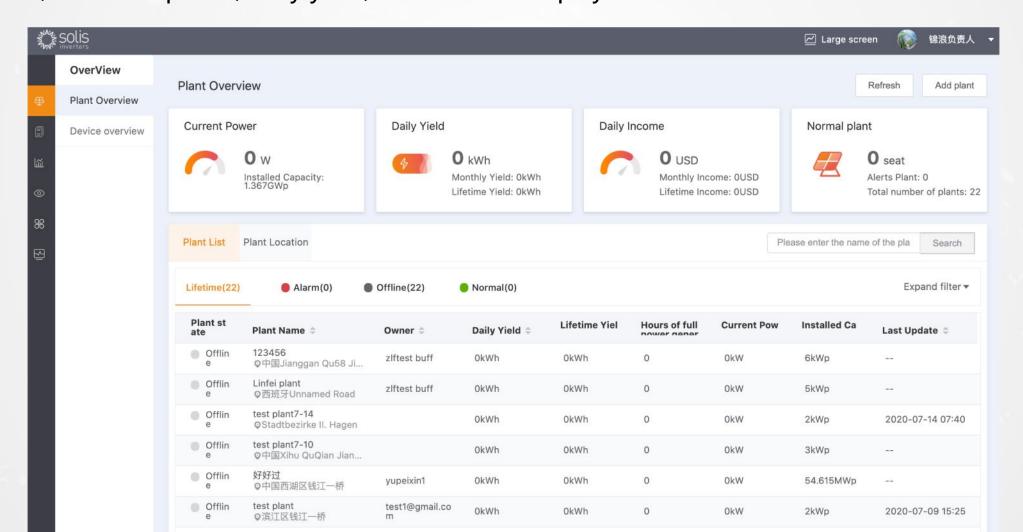

04 View plant information




Click "data", to jump to the plant data interface. view and edit plant data.

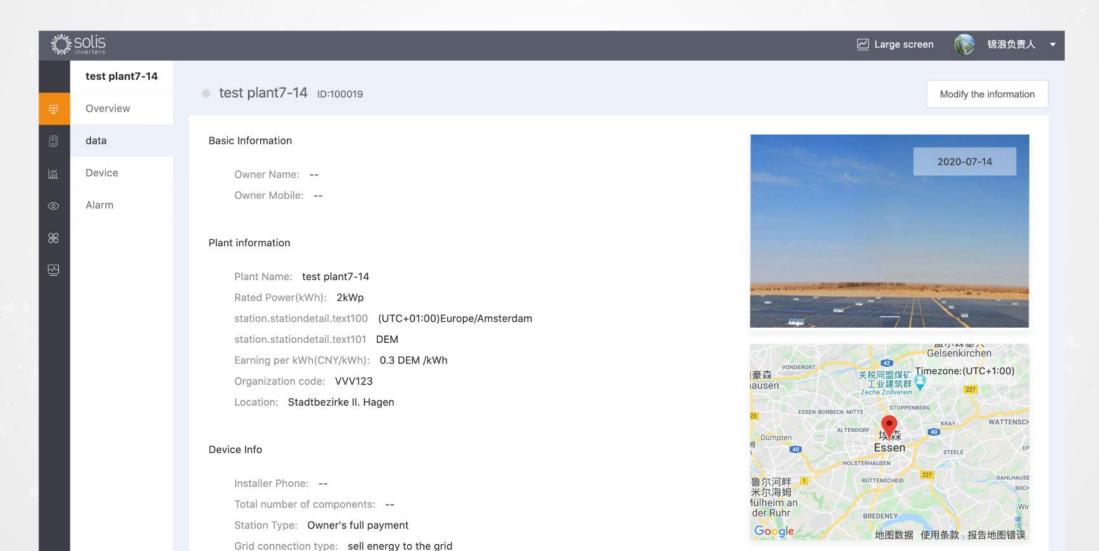

04 View plant information




Click "Device", to jump to the device interface. view and manger inverter and datalogger.

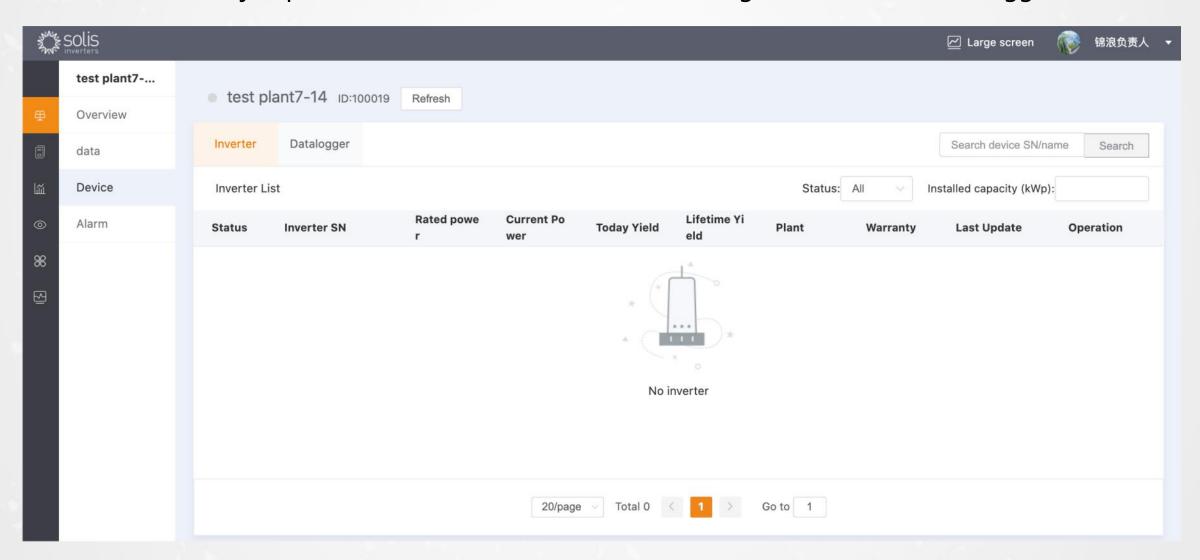


05 Relate the the owner to plant



When you add a new plant, you can relate the the owner to the new plant.

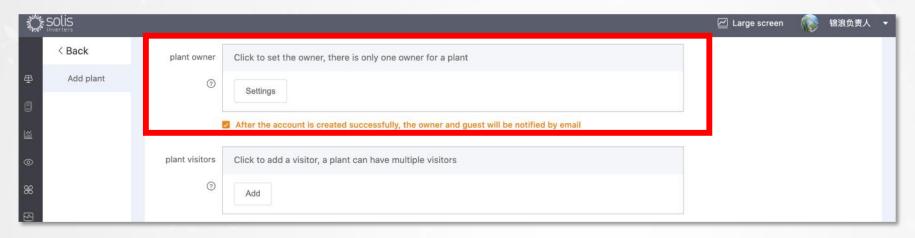

Besides, you can open single plant, click "Modify the information"

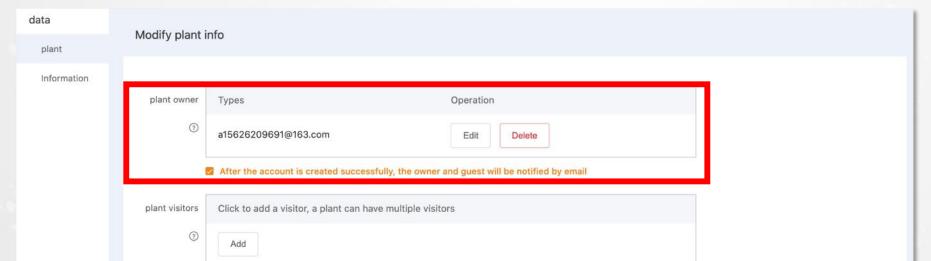

06 Relate the the installer to plant



When you add a new plant, you can relate the the installer to the new plant.

A.M.	SOLIS inverters					∠ ι	arge screen	锦浪负责人	•
	< Back	* Rated	Fill in the total capacity of the plant modul	le kWp	Grid	sell energy to the grid	~		
學	Add plant	Power(kWh)			connection				
8		* Area	Map loca Province City District		type				
ĬĬĬ		* Plant	Please fill in the detailed address		Meter switch	Meter turned off	~		
© 88		Address			Installer Phone	Fill in the installer phone			
SS SS SS SS SS SS SS SS		* addstation.labe	addstation.label136	V	Number Of	Please fill in the number of components			
		* addstation.labe	USD	V	Components				
		* Earning per	Fill in the revenue per kWh U	SD/kWh	Plant picture	+			
		kWh(CNY/kWh)				Up to 9 pictures can be uploaded,			
		Organization	gin001	addstation.label126	3	within 700kb image format			
		code				other settings ▼			
		datalogger SN	Add datalogger SN number	(+)					
			Create a plant						

06 Relate the the installer to plant



Besides, you can open single plant, click "Modify the information"

A MA	SOLIS inverters								Large screen	锦浪负责人	•
Washing to	data	* Plant Name	Androidplant				Station Type	Owner's full payment	1.00		
#	plant	* Rated Power(kWh)	5		kV	/p	Grid	surplus energy to the grid	V		
(O)		* Area	⊚ Map loca	China			type				
æ ≅⊒		, Zhejiang Sheng, China				Meter switch	Meter turned off 15626209691				
_		* addstation.labe	dstation.labe (UTC+08:00) 北京,重庆,香港特别行政区,			Number Of Components	3				
		* addstation.labe					Plant picture				
	ſ	* Earning per	0.6		CNY/kW	/h	1	+			
		Organization code	Fill in the orga	anization code	adds	tation.label126		Up to 9 pictures can be upload within 700kb image format	ded,		
			Save inform	mation	Back		_	other settings ▼			

07 Add sub-leve organizations




Step 1: Click "service -> Organization manage -> New organization"

Step 2: Fill in information in right side -> create organization

Notes:

- Please ensure that the representative's full name of the sub-level distributor is completely correct because it will be used for authentication.
- An email will be sent automatically to the email address you filled in

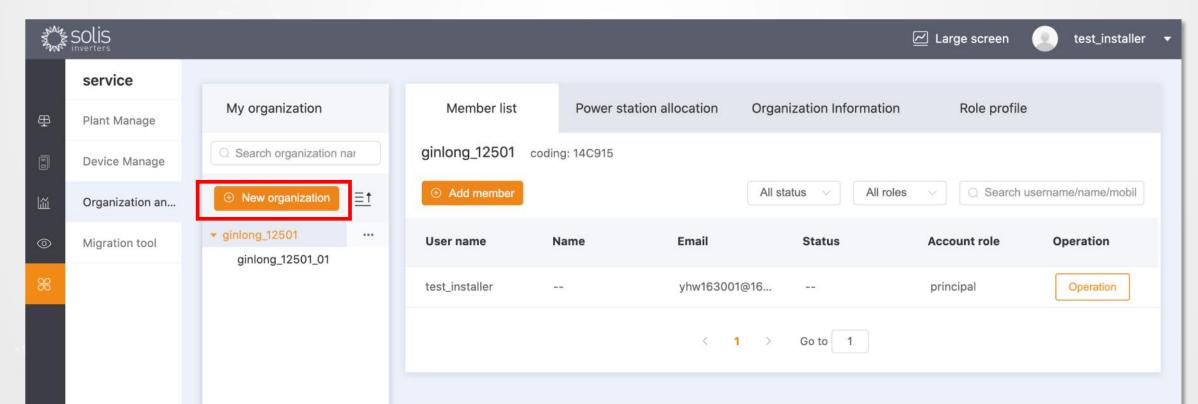

08 Add member for your organizations




Step 1: Click "service -> Organization manage -> Add member"

Step 2: Fill in information in right side -> Create an account

Notes:

- There are 6 types of account role. You can check the differences on the page of "Role profile".
- If your member registered account on the website or APP as a member user, you can accept his application and choose a proper role for him.

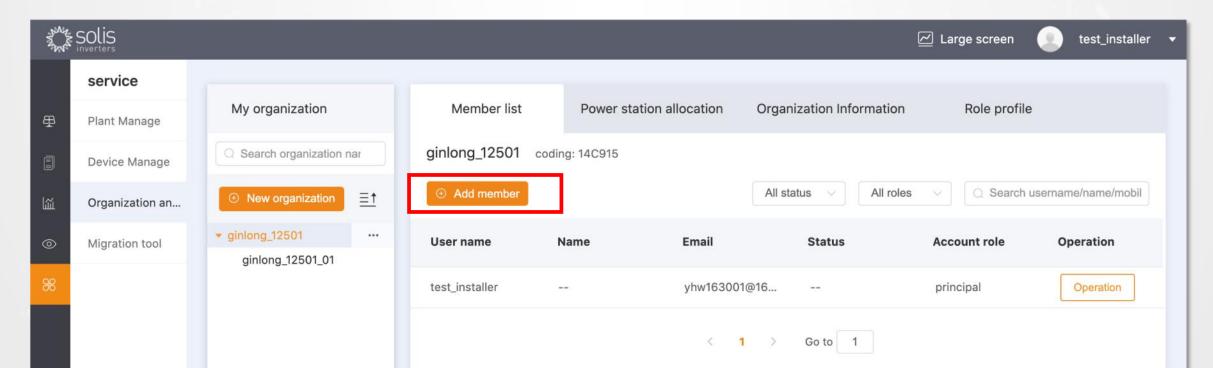


09 Get plant report



Step 1: Click "Report -> plant report

Step 2: Choose "Daily Report" or "Monthly Report" or "Annual Report" or "Cumulative Report" -> selected plants, and set a time range -> Click "Export"

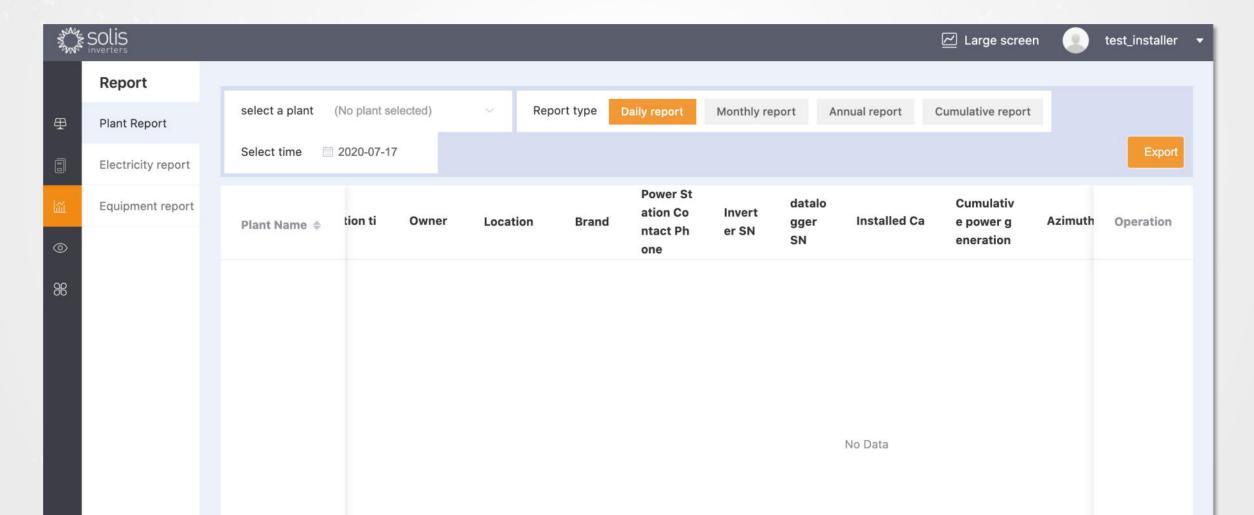

10 Get electricity report



Step 1: Click "Report -> electricity report

Step 2: Choose "Monthly Report" or "Annual Report" or "Cumulative Report" -> set

a time range -> Click "Export"

