


1. Overview

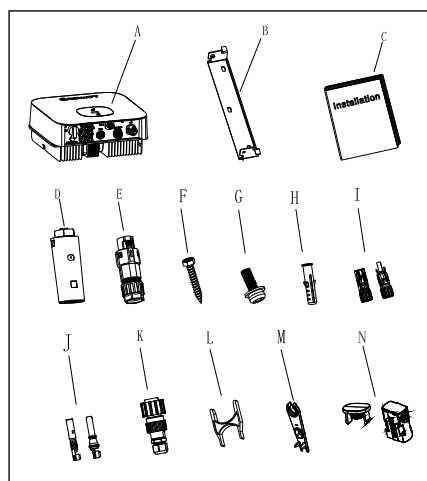

Object	Description	Quantity
A	Inverter	1
B	Mounting bracket	1
C	Quick Guide	1
D	Data logger (Optional)	1
E	Signal connector	2
F	Self-tapping screw	3
G	Cross pan head combination screw with flat washer	1
H	Plastic expansion pipe	3


I	PV+/PV- connector	2/2
J	PV+/PV- and BAT+/BAT- metal contact	3/3
K	AC connector	1
L	Signal or AC connector removal tool	1
M	PV or BAT connector removal tool	1
N	Waterproof and anti-disassembly sealing plug	3/3

⚠ Notice:
Before installing the inverter, please inspect the accessories according to the packing list to ensure completeness and integrity. If any accessories are damaged or missing, please contact the distributor.


2. Installing the Device

2.1 Installation Requirements

Angle and space requirements

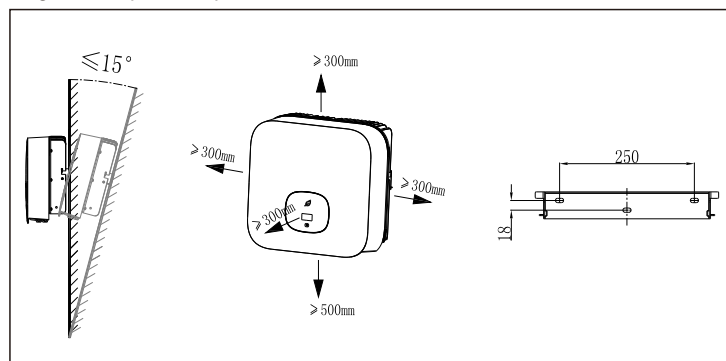


2.2 Installing the Mounting Bracket and the MIN 2500-6000 TL-XH2

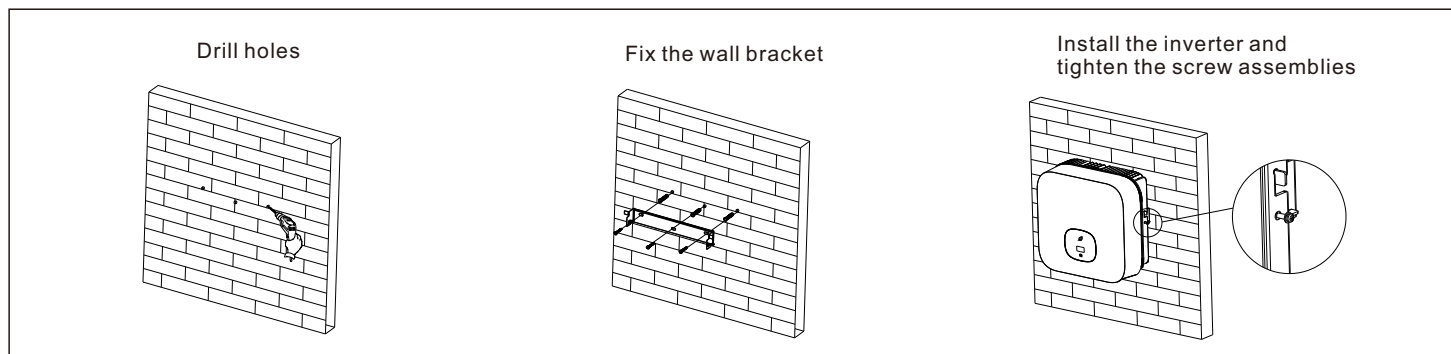


2.3 Installing the Data Logger

Ensure that the Data logger is installed securely.

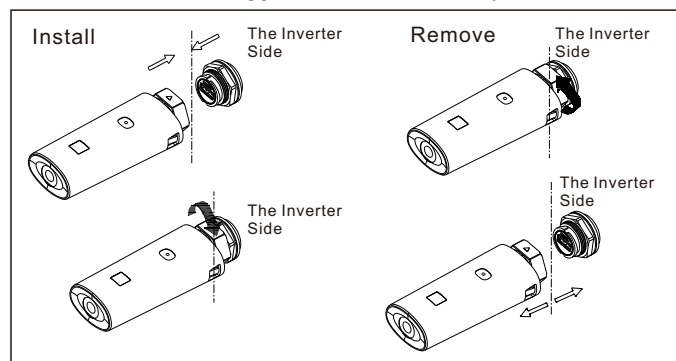

3. Connecting Cables


3.1 Installing the PV Input Power Cable

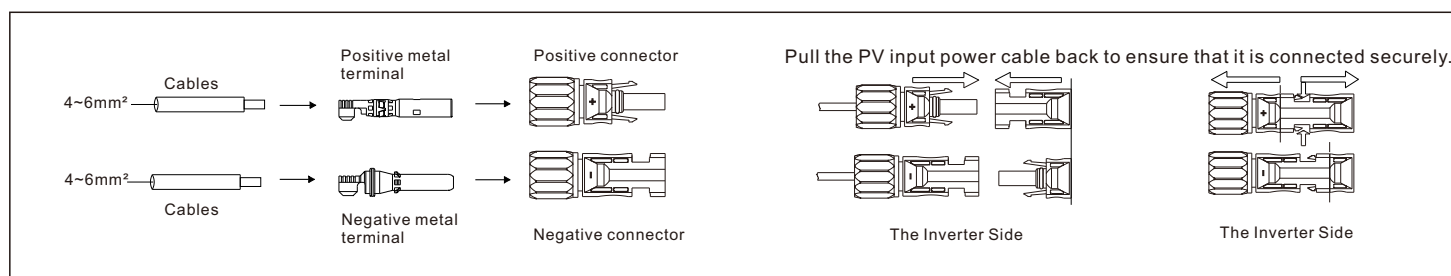

The ratio of connected CT must be 100A/40mA

3.5 Installing the COM Signal Cable

The 8-pin COM port connector is used as a PCI (power control interface) in Europe and an inverter DRED (Demand Response Enabling Device) connection in Australia.

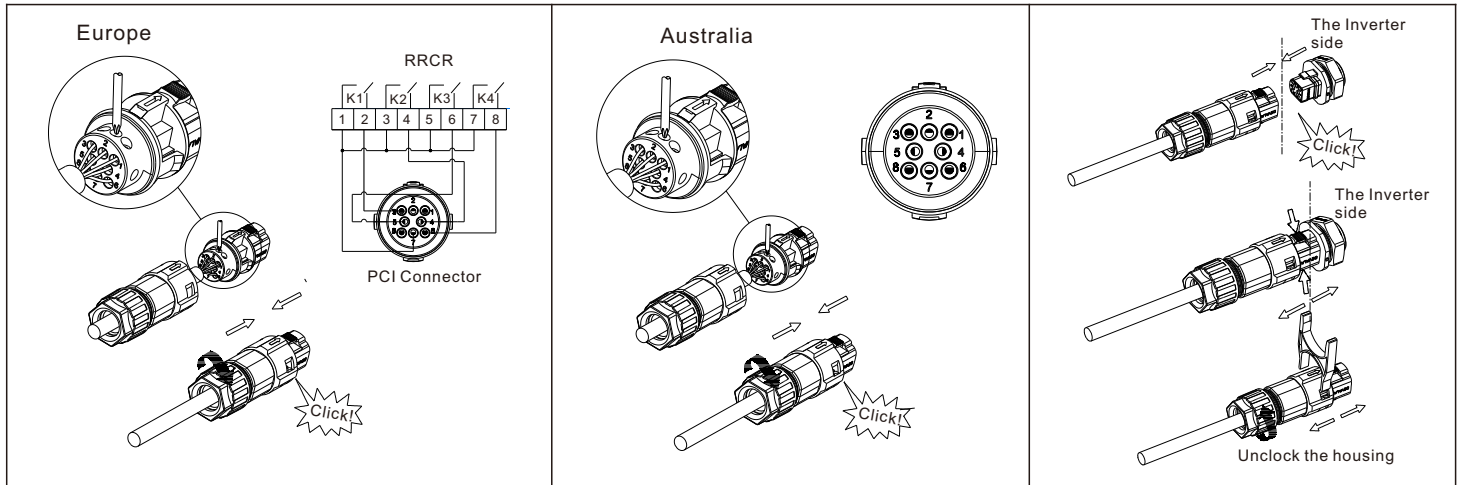

COM Port Pin Definitions- Power Control Interface(PCI).

NO	1	2	3	4	5	6	7	8
Function	+12V	GND	Relay contact 1 input	Relay contact 2 input	Relay contact 3 input	Relay contact 4 input	GND	Not connected
Connect to RRCR	Not connected		K1- output	K2- output	K3- output	K4- output	Relays common node	Not connected

COM Port Pin Definitions- DRED connection


NO	1	2	3	4	5	6	7	8
Function	+12V	GND	DRM1/5	DRM2/6	DRM3/7	DRM4/8	REFGEN	COM/DRM0

⚠ Notice:


1. When laying out signal cables, separate them from power cables to avoid strong signal interference sources.
2. Do not confuse the connector to the COM port with the connector to the SYS COM port.
3. The COM port supports either the PCI or the DRM function.

4. Connecting the Meter

The following figure and table show how to connect the EASTRON meter (SDM2300Modbus) to the inverter:

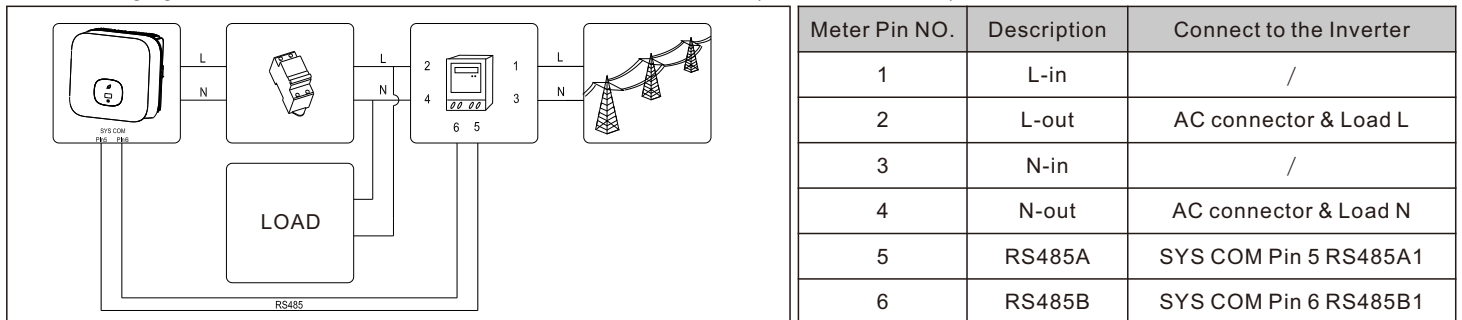

The following figure and table show how to connect the CHINT meter (DDSU666) to the inverter:

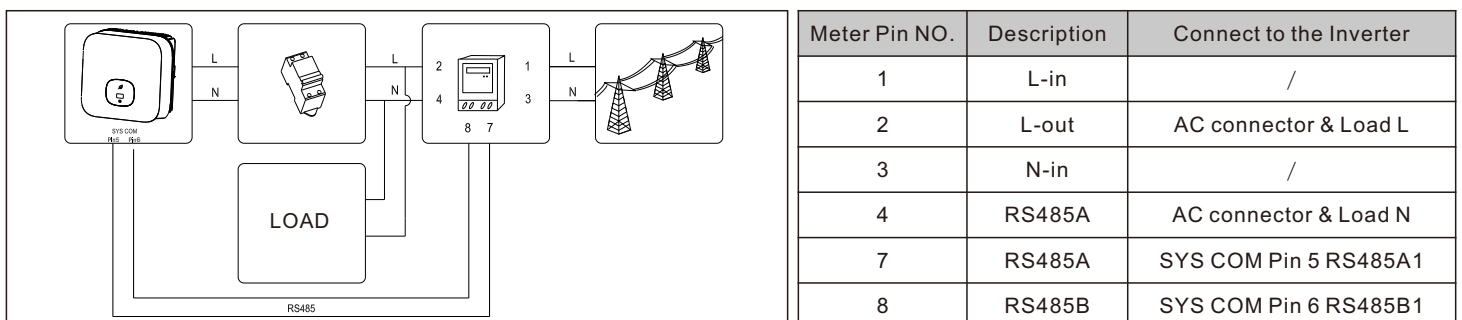

5. Verifying the Installation

1. The MIN 2500-6000TL-XH2 is installed correctly and securely.
2. The datalogger is correctly installed and secured.
3. The Ground cable is connected correctly and securely.
4. The DC switch and all the switches connected to the MIN 2500-6000TL-XH2 are OFF.
5. The AC output power cable, PV&BAT input power cable and signal cable are connected correctly and securely.
6. Unused terminals and ports are locked by watertight caps.

6. Button touch operation

	Touch button	Description
	Single tap	Switch the display or increase the value by one
	Double tap	Enter
	Triple tap	Return to the previous menu
	press and hold for 5s	Confirm the country setting or restore to the default value

7. Powering On the System

- Step 1: Turn on the DC switch at the bottom of the MIN 2500-6000TL-XH2.
- Step 2: Turn on the AC switch between the MIN 2500-6000TL-XH2 and the power grid.
- Step 3: If the OLED screen shows "Country/Area VDE0126", please set the country following Step 4.

Country/Area
VDE0126

If the OLED screen shows "Country/Area Australia", please set the country following Step 5.

Country/Area
Australia

Step 4: Single touch to scroll through the country list and select your country, such as N4105. Then proceed to Step 6.

Country/Area
N4105

Step 5: Single touch to scroll through the country list and select your country, such as New Zealand.

Country/Area
New Zealand

Step 6: Press and hold the button for 5s, or do not touch the OLED screen for over 30s, the country setting is complete.

Set OK

⚠ Notice:

If the LED indicator is steady green, the system is operating properly.
To reset the country, choose Parameter settings > Country setting.

8. Service and contact

Shenzhen Growatt New Energy Co., LTD
4-13/F, Building A, Sino-German (Europe) Industrial Park,
Hangcheng Ave, Bao'an District, Shenzhen, China
T +86 0755 2747 1942
E service@ginverter.com
W www.ginverter.com



Download
Manual



🔍 Growatt New Energy