


## Narrowboat Tilt Mount Instructions



**Arrange the rails along the underside of the solar module. Closer to the edge of the frame is preferable, to allow maximum tilt and flattening, as well as rigidity.**



**Clamp the rails to the underside of the solar module using the provided clamps.**

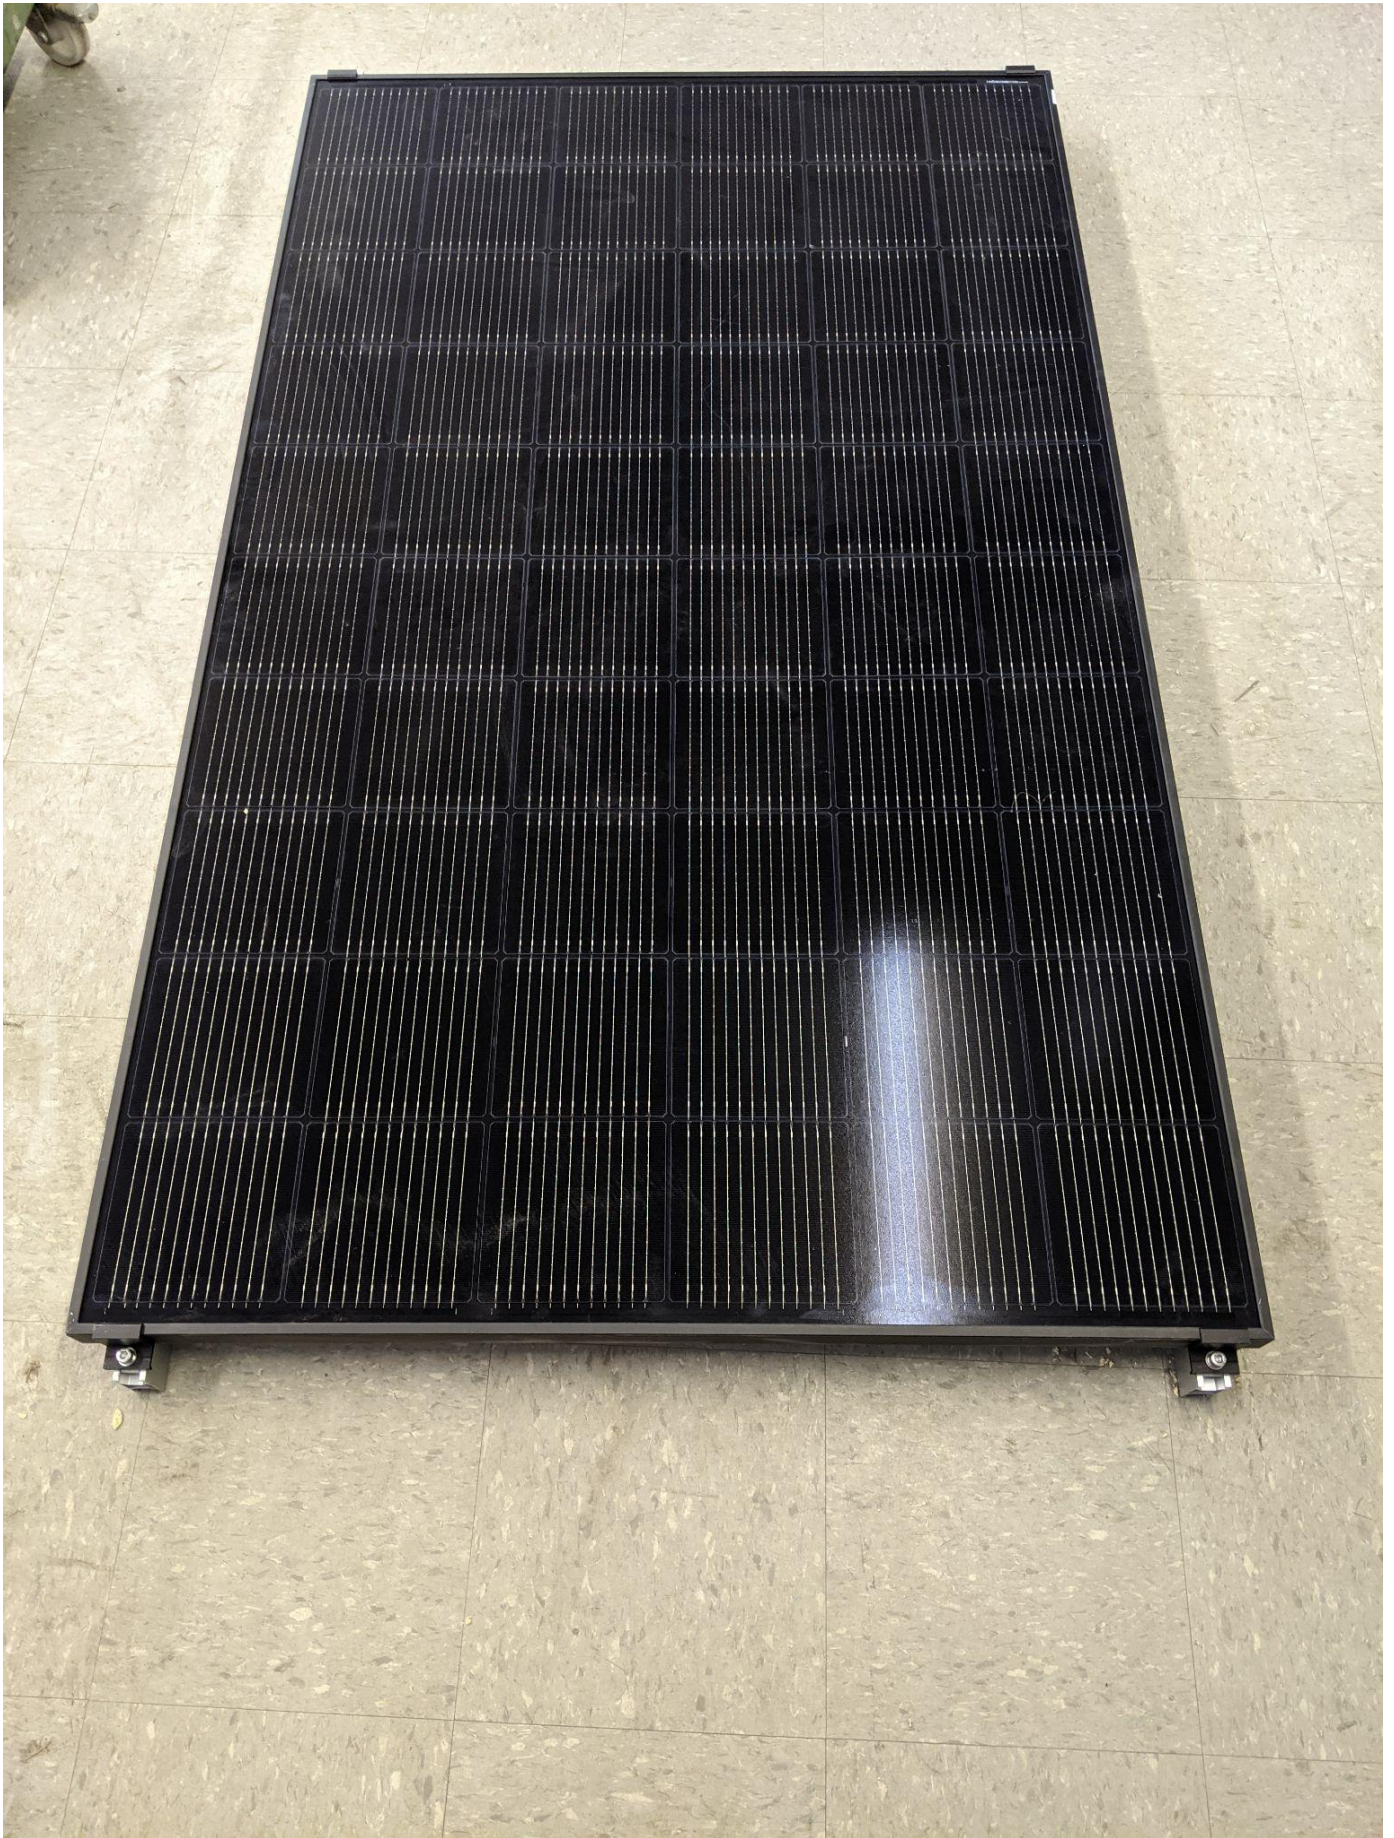

**The rails should now be securely attached to the underside of the module.**



**Attach the tilt legs to the rails on the underside of the module using the provided rail bolt.**



**Attached all four tilt legs to the rails. These want to be located towards the edge of the rails, for maximum stability.**

**Once the structure is assembled, the modules can be positioned on the deck/roof in the desired location ready for the tilt legs to be glued and bolted to the surface. Remember to allow the legs to be flattened completely.**